


UTEPO

**Outdoor CPE
Quick Installation Guide**


V1.0

Hardware connection schematic diagram


2G Bridge

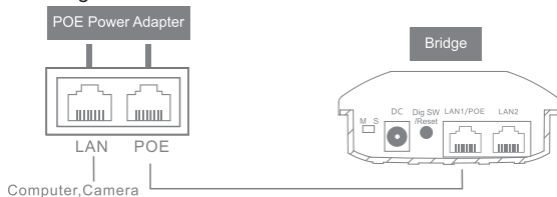

5G Bridge (1)

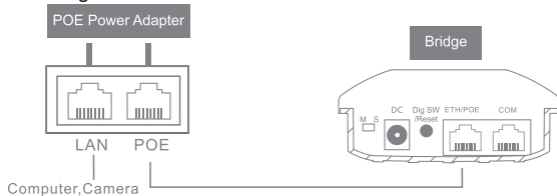

5G Bridge (2)

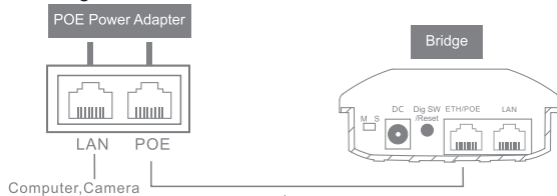

Interface Descriptions

DIP Switch: To adjust the transformation between the "Master AP" mode and the "Subordinate AP" mode of the bridge. (M)(S)

DC: Power interface, 12V 1A DC power interface.

Digital Switch/Reset: Both digital switch and reset button, short press the button when electrifying, the numeric value of the digital tube will be added one and press 15 seconds, the device will be restored to the factory setting. (Dig SW/Reset)

2G Bridge

LAN1/POE: This is a data transmission port, and it is also a power port. When the device works in the bridge mode, the interface acts as a LAN port function. When the device works in the route mode, the interface acts as a WAN port function. This interface is used to connect the POE interface to the POE power.

LAN2: This is a LAN data transmission port which can connect computers, cameras, switches and other devices.

5G Bridge (1)

ETH/POE interface: This is a data transmission port, and it is also a power port. When the device works in the bridge mode, the interface acts as a LAN port function. When the device works in the route mode, the interface acts as a WAN port function. This interface is used to connect the POE interface to the POE power.

COM: It is a debugging interface.



 
5G Bridge (2)

ETH/POE: This is a data transmission port, and it is also a power port. When the device works in the bridge mode, the interface acts as a LAN port function. When the device works in the route mode, the interface acts as a WAN port function. This interface is used to connect the POE interface to the POE power.



LAN: This is a LAN data transmission port which can connect computers, cameras, switches and other devices.

Indicator light state description

2G Bridge

<p>SIG1,SIG2 SIG3,SIG4</p>	<p>Signal indicator: Master AP: Output power indicator lamp. When the output power is less than 17 dbm,the SIG1 light lit,the output power is between 17~19dbm,the SIG1-SIG2 lights lit,the output power is between 20~22dbm,the SIG1-SIG3 lights lit, the output power is at 23dbm and above,the SIG1 to SIG4 lights lit. Subordinate AP: Signal connection intensity indicator Running flowing water light when connection fails. When the connection is successful and the signal intensity in the range of 0~-65dbm, the SIG1 to SIG4 lights lit,the signal intensity in the -66~-75dbm, the SIG1 to SIG3 lights lit,the signal intensity in -76~-85dbm, the SIG1 to SIG2 lights lit,the signal intensity in the -85dbm and below, the SIG1 light lit.</p>
<p>LAN1/LAN2</p>	<p>Port state indicator lamp:When the wire is connected, it is always bright and goes out when it is broken</p>
	<p>The lights flicker when the bridge is running normally.</p>
	<p>Power indicator lamp:When the power is electrified, the lamp is always bright and goes out when it is broken.</p>
	<p>Digital tube indicator lamp:Short press "digital switch / reset"button, each digital tube value wil add one (0-9-A-F cycle).</p>

5G Bridge

SIG1,SIG2 SIG3,SIG4	<p>Signal indicator:</p> <p>Master AP: Output power indicator lamp. When the output power is between 3~9dbm, the SIG1 light lit, the output power is between 10~16dbm, the SIG1-SIG2 lights lit, the output power is between 20~22dbm, the SIG1-SIG3 lights lit, the output power is at 23dbm and above, the SIG1 to SIG4 lights lit.</p> <p>Secondary AP: Signal connection intensity indicator Running flowing water light when connection fails. When the connection is successful and the signal intensity in the range of 0~-65dbm, the SIG1 to SIG4 lights lit, the signal intensity in the -66~-75dbm, the SIG1 to SIG3 lights lit, the signal intensity in -76~-85dbm, the SIG1 to SIG2 lights lit, the signal intensity in the -85dbm and below, the SIG1 light lit.</p>
ETH	Port state indicator lamp; When the wire is connected, it is always bright and goes out when it is broken.
	Power indicator lamp: When the power is electrified, the lamp is always bright and goes out when it is broken.
	Digital tube indicator lamp: Short press "digital switch / reset" button, each digital tube value will add one (0-9-A-F cycle).

Fast pairing of digital switch

One to one pairing method

1. Dial a bridge to "M" and the another bridge to "S".
2. Short press "Dig SW / Reset" button, each digital tube value will add one (0-9-A-F cycle).
3. The paired bridge is set to the same value and can be paired successfully.

One to multiple pairing method

1. Dial a bridge to "M" and the another bridges to "S".
2. Short press "Dig SW / Reset" button, each digital tube value will add one (0-9-A-F cycle).
3. The paired bridge is set to the same value and can be paired successfully.

Digital tube and wireless channel comparison table

2G Bridge

Value	0	1	2	3	4	5	6	7	8	9	A	b	C
Channel	1	2	3	4	5	6	7	8	9	10	11	28	32

5G Bridge

Value	0	1	2	3	4	5	6	7	8	9	A	b	C	d	E	F
Channel	36	40	44	48	52	56	60	64	149	153	157	161	182	186	190	194



Note:

- 1.The default channel bandwidth of the wireless bridge is 40MHz.
- 2.The number of channels supported by some wireless bridges will vary. Please refer to the actual product.

Setting up a bridge in a browser

Computer settings:

- 1)Open the computer--Right click [Internet] - [Attribute] - [Change adapter settings] ;
- 2)Right click of the mouse click [Local connection] ,Select [Attribute] ;
- 3)Double-click the [Internet protocol version 4 (TCP/IPv4)] in the connection properties dialog box project(as show in the left below).
- 4)In the [Internet protocol version 4] dialog box, choose [use the following IP address] and set the IP address to 169.254.254.X (X is any number between 1-253), and the subnet mask is set to 255.0.0.0 (as show in the right below). Finally,click [OK] and quit.

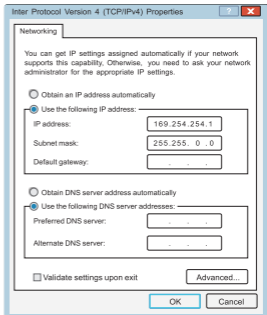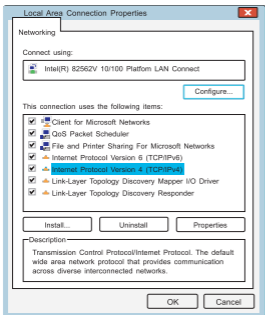

Login management interface

The default mode of the device is the bridge mode, open the computer browsers, after entering its address 169.254.254.254, the bridge device list will be displayed, and clicks on the **[login]** button to log in to the device.

Note: Some wireless bridges do not have "Bridge Device List" function. Please refer to the actual product for details.


Bridge Device List						[Global/中文]
ID	MAC	IP address	Wireless mode	Status	Operate	
1	18:40:a4:00:00:02	169.254.254.111	Server Mode	Online	Login	

The username and password of the web management platform are all utepo, click the **[login]** button to log in to the device.

Web Management Platform		[Global/中文]
<input type="text" value="utepo"/>	Username	
<input type="password" value="....."/>	Password	
<input checked="" type="checkbox"/> Remember password		<input type="button" value="Login"/>

Network settings

Configuring the mode and bridge interface according to the network usage of the site. **[Bridge mode]** refers to the wireless transmission of data by the device. **[Route mode]** refers to the device's NAT conversion and wireless transmission of the data.

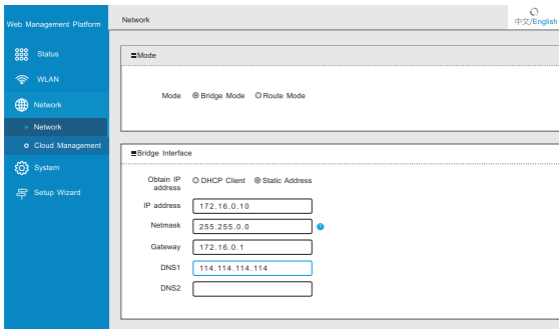

Description:The device supports bridge mode and route mode in the “M AP” mode, but only support the bridge mode in the “S AP” mode.

Wifi settings

Note: Some wireless bridges do not have this function. Please refer to the actual product for details.

The default WiFi name of the 2G Bridge is Brap-2G-XXXX, the password is 88888888.

The default WiFi name of the 5G Bridge is Brap-5G-XXXX, the password is 88888888.

Computers, mobile phones, and other terminals can be wirelessly connected to the device through this signal. (Remarks: XXXX is the last four bits of the bridge's MAC address)

Web Management Platform

WiFi Settings

WiFi Settings

Enable

Hide

SSID

Encryption

Password


[Save](#)

Copyright © 2017 YXA10015807

Description: The device launches the WiFi signal in the main AP mode. In the secondary AP mode, the WiFi signal is transmitted only after the bridge pairing is successfully connected.

Packing List

CONTENT	QTY
CPE	1
POE Injector	1
Mounting Kits	1
Cable	1
User guide	1

QUALIFIED CERTIFICATE	
MODEL:	
CHECKER:	
DATE:	